# Scale-Link Wireless 3

The industry standard take-off tool for entering linear measurements from your blueprints, maps, or plans into any Windows program. Just roll the scaler wheel along your print, then click to instantly transfer the measurement into your program. Scale-Link Wireless 3 contains everything you need to get started. The included PlanWheel can be used remotely in the field or interfaced with your PC at distances of up to 25 feet!

| Microsoft facel Brook1 | FlashEaper Window Help Add | FlashEaper | FlashEaper Window Help Add | FlashEaper Window Help Add | Flash

Select units of readout (inches, feet, yards, meters, etc.)

and length

Click here to


transfer length from

PlanWheel WL 3 into

software program

Zero the count

Transfer count from PlanWheel WL 3 into software program

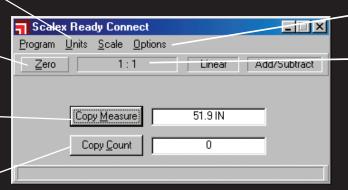

The Ready Connect™ window indicates readout from the PlanWheel WL3™.

. Change user defined scales, adder, etc.

### Select scale factors

- Architectural, Engineering, Map, and Metric
- 111 Built-in
- Thousands of available user-defined
- Create any custom scale with auto-scale feature



### Scale-Link Wireless 3 Includes:

- PlanWheel WL3™ Scaler
- Ready Connect™ Software
- Charging Cradle w/ USB Cable
- Protective Case
- \varTheta One Year Warranty
- User Manual
- Rechargeable Batteries (2AAA)

Scale-Link works with all Windows® operating systems.

# Scale-Link is specially suited for:

- All Windows construction estimating software
- Excel®, Quatro Pro®, Lotus 1-2-3® and other spreadsheets
- Access®, dBase®, Paradox®, Foxpro®, and other databases

## **System Requirements**

- Windows® Compatible Computer
- CD-ROM Drive
- USB Port

